



INSTALLATION PROCEDURE FOR C-I-P THRESHOLD


1. LAYOUT DOOR OPENING

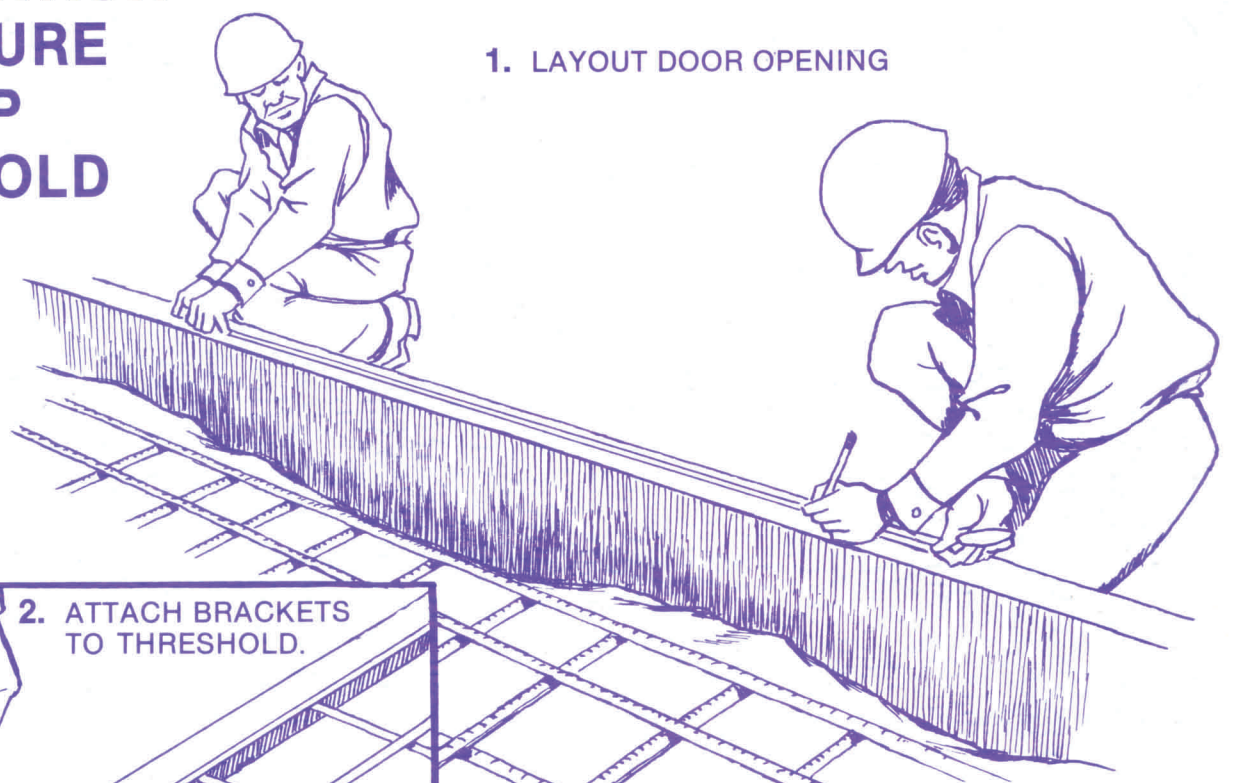


2. ATTACH BRACKETS
TO THRESHOLD.

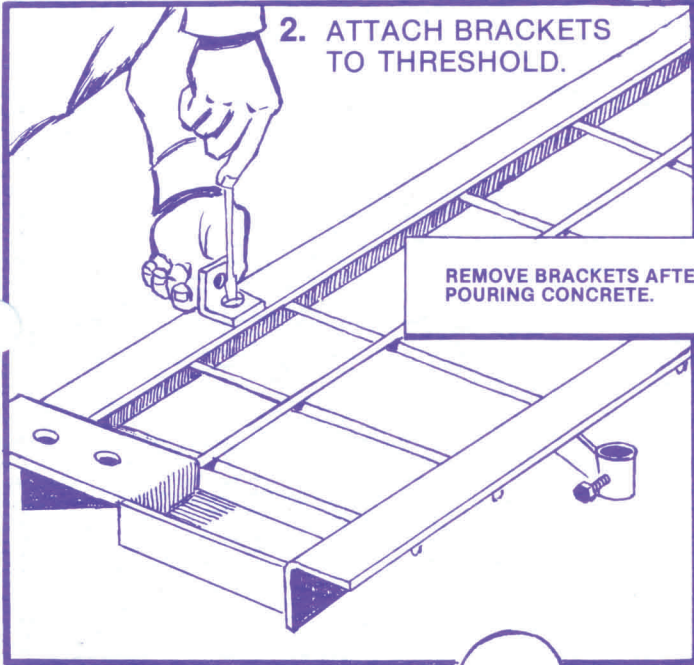


REMOVE BRACKETS AFTER
POURING CONCRETE.

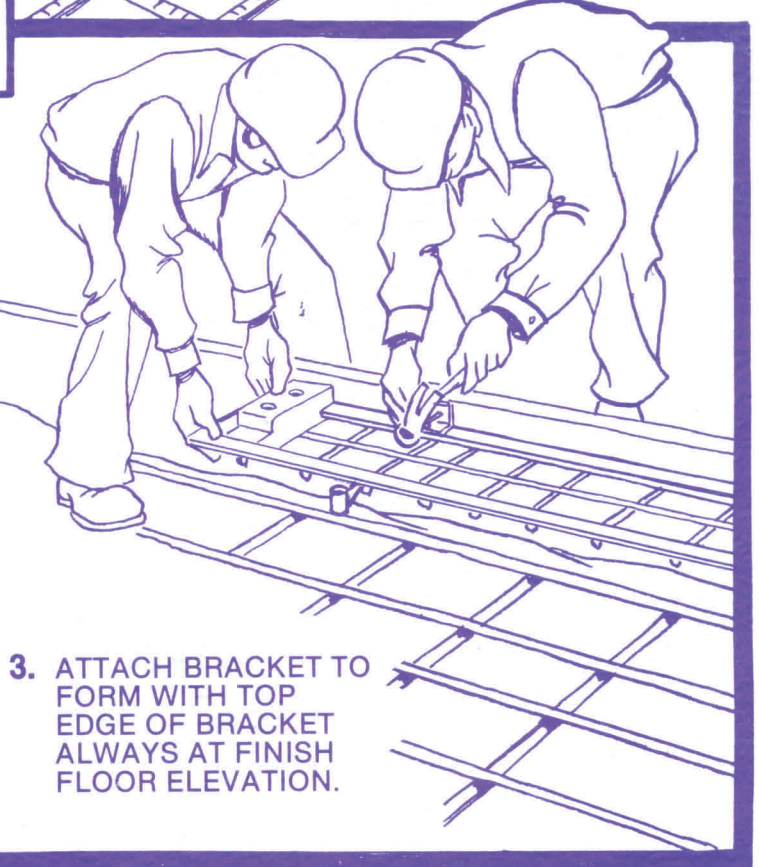




3. ATTACH BRACKET TO
FORM WITH TOP
EDGE OF BRACKET
ALWAYS AT FINISH
FLOOR ELEVATION.

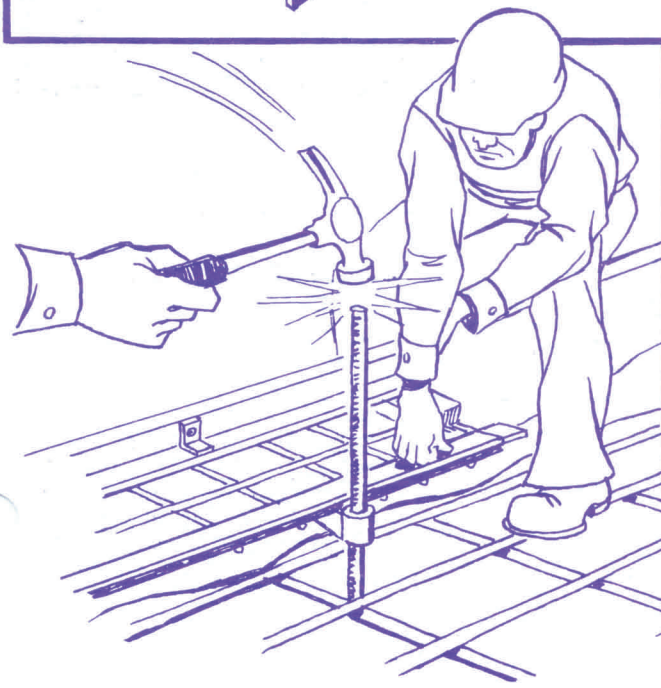

4. PLACE 1/2" REBAR IN SLEEVE
AND DRIVE INTO GROUND.

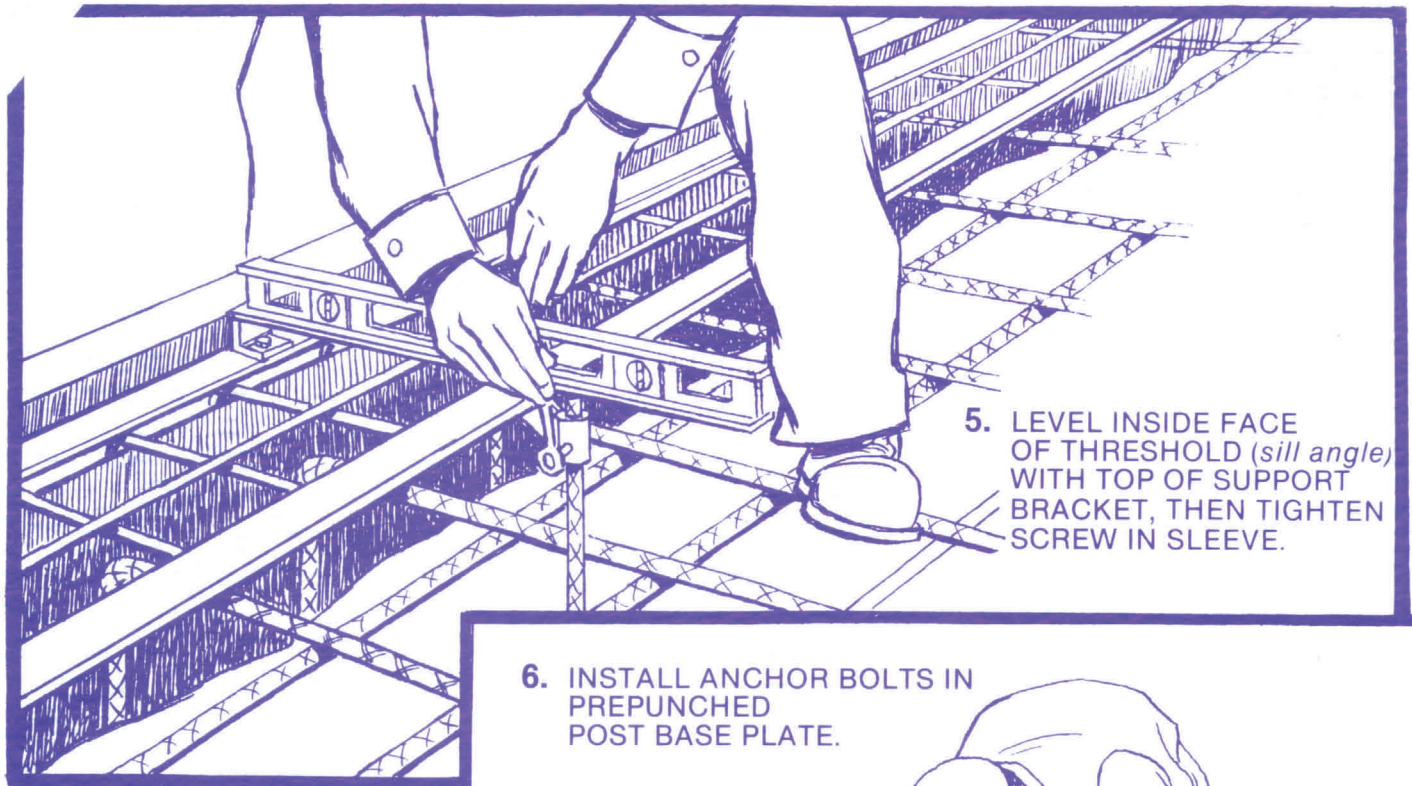

7. YOU ARE NOW READY TO POUR IN THE FLOOR.

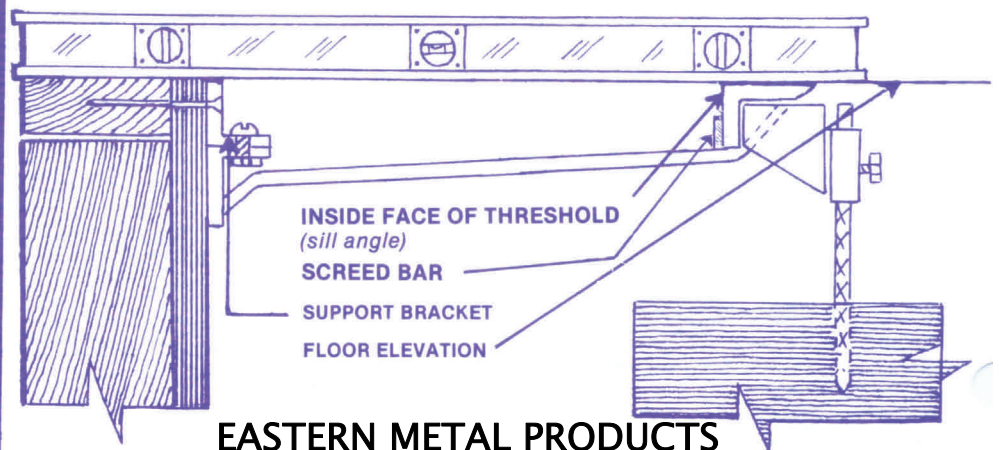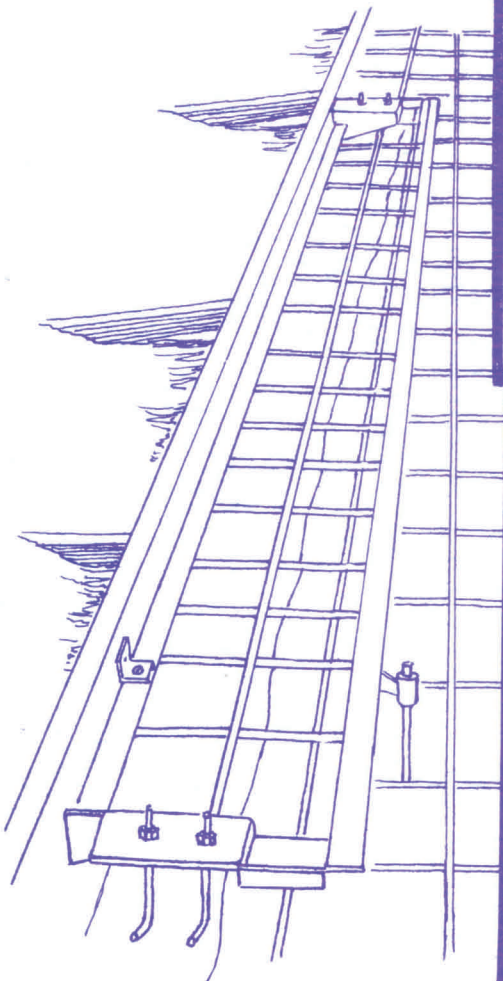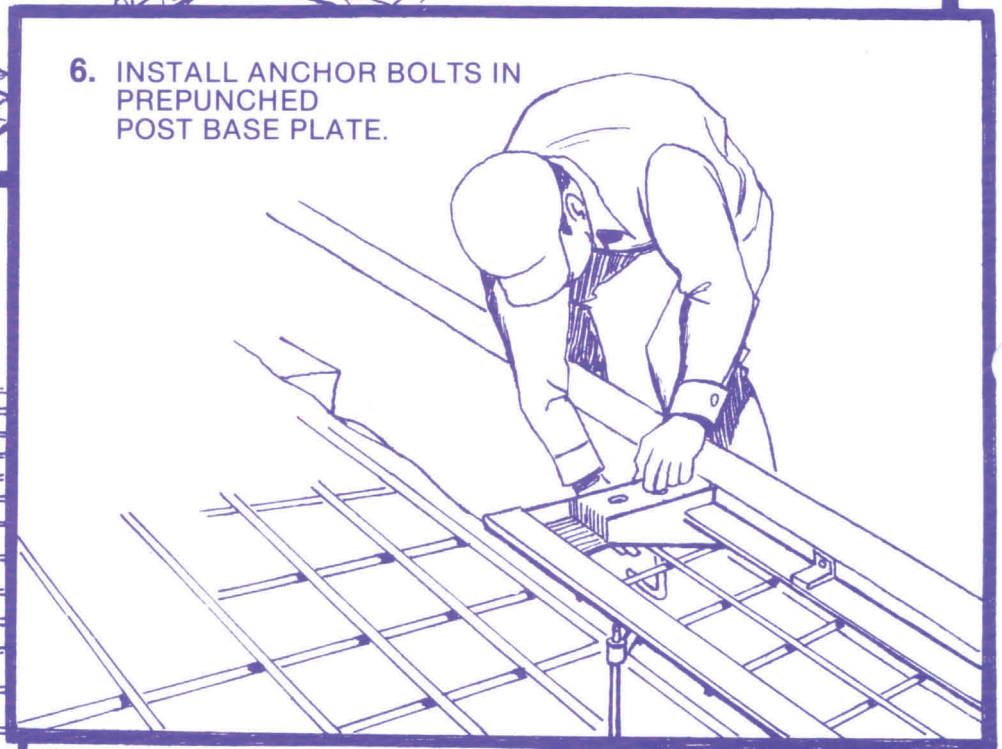

EASTERN METAL PRODUCTS

1009 Horseshoe Road—Elizabeth City, NC 27909
 252.335.5165 fax 252.335.9539 toll free 866.312.7127
www.cipthreshold.com